

andrew James

Filter Coffee Maker



Pour la version française veuillez consulter notre site de web
www.andrewjamesworldwide.com

Die deutsche Version finden Sie auf unsere Webseite
www.andrewjamesworldwide.com

Please read the manual fully before using the appliance and keep the
manual safe for future reference.



@andrewjamesltd

General Instructions

When using any electrical appliance, basic safety precautions should always be followed, including:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8

years old.

- Always ensure the voltage on the rating label corresponds to the voltage in your home.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by a qualified electrician or a service repair centre. If in doubt please contact our customer service team.
- The appliance is intended for domestic use only. Industrial or commercial use will void the warranty. The supplier cannot be held responsible for injury or damage if the appliance has been used for anything other than its intended use.
- Incorrect operation and use can damage the appliance and cause injury to the

user.

- Do not use the appliance if it has been dropped or damaged in anyway. If the unit has been damaged take the unit for examination and or repair by an authorised service agent.
- Do not immerse or expose the motor assembly, plug or the power cord in water or any other liquid for any reason.
- If the supply cord is damaged, it must be replaced by the manufacturer or by someone who is suitably qualified to avoid a potential hazard.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled or tripped over accidentally.
- Do not allow the cord to touch hot surfaces and do not place the cord near hot gas, electric burners or in a heated oven.
- Use of an extension cord with this appliance is not recommended. However if it is necessary to use an extension cord, ensure that the extension cord is equal to or greater than the power consumption of the appliance to avoid overheating of the appliance and extension cord. Do not use any other appliance on the extension cord. Do not place the extension cord in a position where it can be pulled on by children or animals or be tripped over.
- Always operate the appliance on a smooth, even and stable surface. Do

not place the unit on a hot surface.

- Always remove the plug of the appliance safely. Do not pull on the appliances cord to remove the appliance plug from the electrical socket.
- Never handle or operate the appliance with wet hands.

Appliance specific safety instructions


- Always use the appliance on a stable surface.
- Never use the appliance near hot surfaces.
- Never use accessories which are not recommended by the manufacturer, they could constitute a danger to the
- user and risk damage to the appliance.
- Never use hot water in the appliance as this will cause

damage.

- Always use fresh, cold water that is safe to drink.
- Make sure the cord never comes into contact with the hot parts of the appliance.
- Do not touch the hot parts of the appliance including the hot plate.
- Only touch the plastic parts such as the controls and the coffee pot by its handle.
- Be careful not to get burned by steam evaporating from the coffee filter.
- Never use the appliance if the coffee pot displays any signs of cracks.
- Only use the coffee pot supplied with the appliance.
- Handle with care as the glass is very fragile.

- Never use your coffee machine without water in it.
- Never place the coffee pot when it is empty or almost empty on the hotplate or any other hot surfaces, as this can damage the coffee pot.
- Do not use the coffee machine with a damaged lead.
- Please be aware that the coffee in the coffee pot will be very hot.
- Always handle the coffee pot with care to avoid any risk of splashes.
- Allow the mesh filter to cool down before removing it.
- Always ensure when the appliance is switched on and in use that the filter holder, mesh filter and fresh coffee granules are in the appliance.
- Ensure there is enough water in the water tank when using the appliance.

Appliance components parts

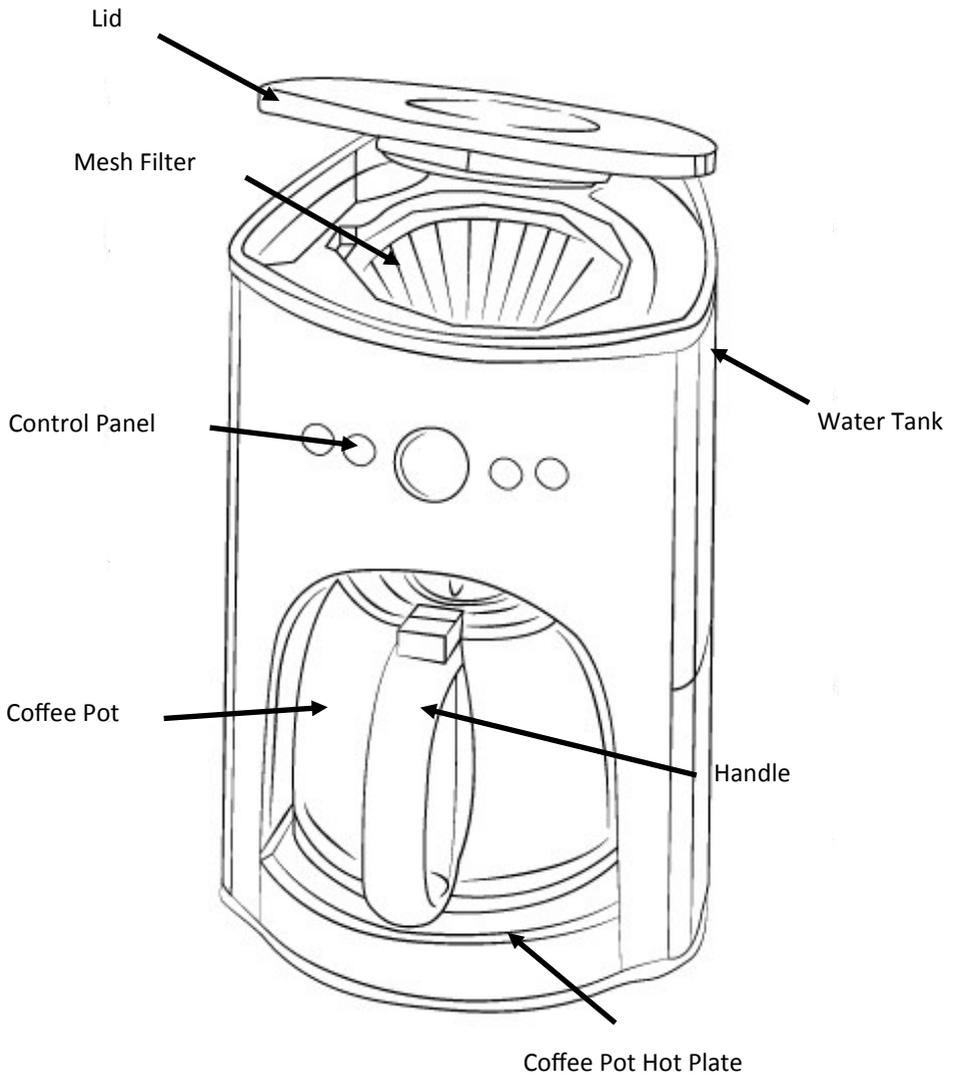

How to use the appliance

Before use

1. Fill the water tank of the coffee maker with white vinegar, but make sure to leave the filter inside the machine, as the vinegar will get rid of any residue or smells that have formed on the filter.
2. Turn the coffee maker on and run it with the white vinegar inside. Once the coffee maker has completed a cycle, let the vinegar sit inside the machine for about twenty minutes.
3. After you have let the machine go through a full cycle and waited for it to sit for twenty minutes, pour the vinegar down the drain.
4. Fill the water tank of the appliance with water as if you're about to make a pot of coffee. Turn the coffee maker on again and let the water go through a normal cycle in order to rinse the vinegar from the machine completely.

Making coffee

1. Lift the lid up and pour cold water into the water tank (to the sides of the filter holder) to the required level.

Please note: The levels indicate small cups.

1. Place the coffee jug on the hot plate,

ensuring that the coffee lid is directly underneath the filter holder hole.

2. Put the required amount of coffee powder into the mesh filter and then place it into the filter holder. A 1:2 ration of scoops to water should create medium to high strength coffee.
3. Close the top cover.
4. Switch on the coffee maker by the mains, the LCD digital display will turn on.
5. Press the on button once, which will make the digital display light up as well as the run mode indicator light. The machine will now begin making the coffee.
6. After the coffee maker has finished, there will be no water left in the water tank. The coffee will be kept warm if the coffee maker is switched on and the coffee pot is kept on the heating plate.
7. The coffee in the coffee pot can be warmed at the following temperatures:

- Above 75°C (approx. half an hour)
- Above 70°C (approx. an hour)

Please note: The appliance will stop heating automatically after 35 minutes.

How to operate the control panel

How to make coffee in the manual mode

1. The coffee maker can make coffee in manual mode without setting up the clock or timer.
2. Switch on the coffee maker by the mains and the LCD digital display will turn on. Press the on button once, and the digital display and run mode indicator will light up. The machine will then begin boiling the water and making coffee.

How to set the clock

1. When connected to the mains power, the LCD will display 12:00. The run and auto indicator light will not be turned on.
2. Press the PROG button once and the LCD will display the word CLOCK in the LCD display.
3. The clock can now be set.
4. Press the HOUR button once and the time will increase by 1 hour. Holding the HOUR button will increase the hourly time quicker.
5. Press the HOUR button until the correct hourly time is set on the LCD display.
6. Once you have selected the correct hourly time, press the MIN button to

set the correct time. By holding the MIN button again this will increase the minutes on the clock quicker.

7. Once the correct time has been set, press the PROG button once and the TIMER indicator will be displayed in the LCD display. Press the PROG button again and the TIMER indicator will disappear. The clock has now been set up.
8. If the machine is turned off by the mains the LCD display clock will be turned off and will have to be set again.

How to set the timer of the Coffee Maker

1. The Andrew James Automatic Filter Coffee maker can be programmed to begin making coffee at a selected time using the PROG mode with the built in timer facility.
2. Make sure the correct time on the clock is shown on the LCD display.
3. Press the PROG button twice so that the word TIMER is displayed in the LCD display. This means the timer can be set up.
4. Press the HOUR button once and the time will increase by 1 hour. Holding the HOUR button will increase the hourly time quicker on the timer.

5. Press the hour button until the correct hourly time is set on the LCD display.
6. Once you have selected the correct hourly time, press the MIN button and follow the same process. Pressing the button once will increase the time by 1 minute and by holding the MIN button again this will increase the minutes on the timer quicker.
7. Once the correct time is set up on the timer function, press the PROG button once and the TIMER indicator will disappear from the LCD display and revert to the clock time on the LCD display.
8. To finish setting the timer function press the ON/OFF button twice and the auto indicator will light up. The coffee maker will start making the coffee at the set time.

Please note: There is no memory function.

Important notes

- Please note, the clock does not have to be set up to make coffee.
 - The Coffee maker can be turned off at any time in either the manual or timer mode:
 - Press the ON/OFF button twice if the coffee maker is in the RUN mode.
- Press the ON/OFF button once if the coffee maker is in the AUTO mode.
 - If the coffee maker is not turned off by hand, the appliance will stop heating automatically after 35 minutes in both the (RUN) and (AUTO) mode.

Descaling the appliance

Regularly remove mineral deposits from the appliance. The frequency you remove mineral deposits depends upon the amount you use the appliance. It is recommended you do this every 30 days.

To remove mineral deposits:

1. Fill the water tank with water and descaler to the MAX level using a ration of 1 parts descaler to 4 parts water. Please use household descaler and not industrial descaler, citrus juice can also be used.
2. Place the carafe onto the warm plate.
3. Run a brew cycle as mentioned in “making coffee” without placing coffee into the filter holder.
4. After the coffee machine has percolated the equivalent of one cup, press the “ON/OFF” button once.
5. Leave the solution to work in the appliance for 15 minutes.

6. Run another brew cycle until all the descaler has passed through the appliance.
7. Then run clean water through appliance another three times before using again.

Descaler can be bought from all good supermarkets.

You can also descale your appliance using a vinegar solution. In order to do that, follow the steps below:

1. Mix one part water with one part distilled white vinegar.
2. Run the solution through the machine as described on the previous page, but make sure to remove any coffee first. Once the solution has run through, discard.
3. Rinse the machine by running fresh water through it three times.

Cleaning and maintenance

- Always remove the plug from the socket before cleaning the appliance.
- Wipe the main body of the coffee maker with a wet cloth only.
- Always ensure that the coffee pot has cooled down completely before cleaning.
- The filter holder can be removed by lifting the filter holder handle up.

- Removable parts including the coffee pot, filter holder and the mesh filter should always be hand washed in warm water with a neutral detergent.
- Always ensure any removable parts are clean and dry before reassembling the appliance.
- Never use a dishwasher to clean any part of the coffee maker including the coffee pot.
- When the appliance is not in use, place the appliance in a dry and ventilated area.

UK and EU Guarantee

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this product is for domestic use only and is not for commercial use.

Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box, and presented with the

original receipt of sale/order number. This does not affect your statutory rights.

Returned products must be cleaned and returned to us in as close to delivery condition as possible.

If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer.

If you wish to return your item for a full refund, you have the right to do so within the first 7 days. For our returns policy please go to:

www.andrewjamesworldwide.com

Customers are responsible for any taxes applied to our products when they are shipped outside of the EU.

All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.

The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also,

the guarantee does not cover normal wear and tear of individual parts.

Electrical Information

Always ensure the voltage on the rating label corresponds to the power supply where the product is being used.

WARNING! This product must be connected to an earthed electrical power supply. The green / yellow conductor in the supply cord must be connected to the Earth terminal in the plug. The power supply must have an Earth connection.

Precautions should be followed for safe cable management and connection to the power supply

If a new mains plug needs to be fitted follow the fitting instructions supplied with good quality BS1363A plugs. If in doubt consult a qualified electrician or appliance repair agent.

- Safely dispose of the old plug.
- Connect the brown lead to the live terminal "L" in the new plug.
- Connect the blue lead to the neutral "N" terminal.
- Connect the green/yellow lead to the earth "E" terminal.

Recommended fuse: 13A

If an extension cable is required, it must have an earth conductor. To avoid

overheating the extension cable should be rated no less than 13A and be fully unwound before use.

Do not attempt to modify electrical plugs or sockets or attempt to make an alternative connection to the electrical supply.

Disposal of the appliance

Waste Electrical & Electronic Equipment (WEEE) Waste & Recycling



Disposal of Electrical and Electronic Waste

Non-household waste. This product must not be disposed of together with ordinary household waste.

Separate collection of used products, batteries and packaging allows the recovery and recycling of materials. Re-use of materials helps prevent environmental pollution and reduces the demand for raw materials.

Local authorities, retailers and collection organisations may provide for separate collection of electrical products, batteries and packaging.

Contact details

Andrew James UK LTD

Unit 1

P C Henderson Premises

Bowburn North Industrial Estate

Bowburn

Co Durham

DH6 5NG

Customer Service / Technical Support

Telephone: 0844 335 8464

Email:

customerservices@andrewjamesworldwide.com

Web:

www.andrewjamesworldwide.com

Twitter: @andrewjamesltd

Facebook: Andrew James

Copyright Andrew James

Pour la version française de ce notice veuillez visiter notre site:
www.andrewjamesworldwide.com

Bitte finden Sie die deutsche Version dieser Bedienungsanleitung auf unserer:
www.andrewjamesworldwide.com

AJ000002 / AJ000565

01/2017